Changing Controllers, TeamBoard H-Series to TeamBoard IR

To switch between controllers from the H-series USB TeamBoard to TeamBoard IR in TeamBoard Suite Ver 4.2, please use the following instructions.

Open TeamBoard Properties in the Control Panel.

Click on Replace device.

TeamBoard Properties	
H-Series	0
<u>Hardware</u> <u>Lick Mode</u> <u>Properties</u>	■ Handling Whole desktop Connected to USB port
Calibration	
<u>Status</u>	Replace de <u>v</u> ice
Cal <u>i</u> brate	✓ Close ③ Help

 Image: Select controller type >
 Image: Select controller type >

 Select controller type
 Image: Select controller type >

 Image: H-Series, USB
 Image: H-Series, Serial

 Image: H-Series, Serial
 Image: H-Series, Serial

 Image: H-Series, Series, Series,

Click Controller Type, Select TeamBoard IR, USB. Click OK

TEAM BOARD




Priority

Mode

Release Time 5

√ Close

٢

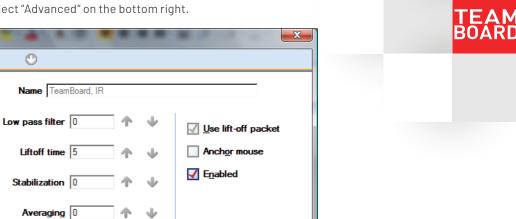

Advanced

i About

Click "Invert Y" and click	UK.
----------------------------	-----

TeamBoard Properties TeamBoard, IR

Properties

Click Mode

Calibration

<u>S</u>tatus

📜 Cal<u>i</u>brate

Jh

T Advanced properties						
Edge acceleration						
	Width	Gain				
Left	0	0	Invert X			
Right	0	0	✓ Invert Y			
Тор	0	0				
Bottom	0	0	<u>Swap</u> XY			
✓ Ignore touches outside calibrated area						
<i>i i i</i>						
√ <u>O</u> K X Cancel 3 Help						

Interlock (d)

0

 $\mathbf{\Psi}$

ተ

? H<u>e</u>lp

Calibrate the TeamBoard IR.